





HYUNDAI ATOS

1998-


VEHICLE ON THE FLOOR

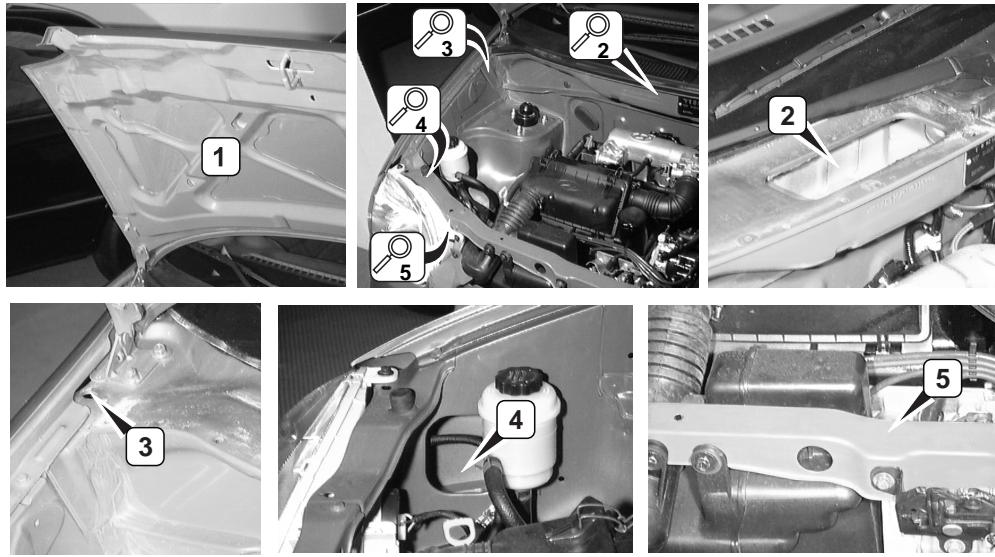

1. engine bonnet
2. bulkhead; detach panel; spray sparingly
3. front wings; rear section
4. front wings; front section
5. crossmember, upper

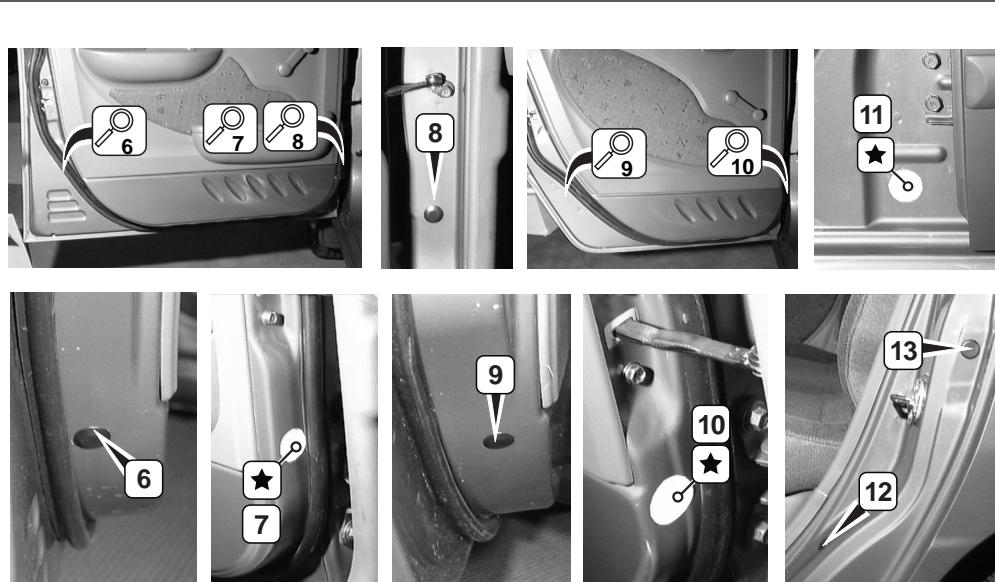







6. front doors; rear section; remove rubber sealing
7. front doors; front section; drill and plug hole
8. 'A' posts; remove rubber sealing
9. rear doors; rear section; remove rubber sealing
10. rear doors; front section; drill and plug hole
11. 'B' posts; drill and plug hole; pull out and lock safety belt
12. 'C' posts; bottom section
13. 'C' posts; top section; pull out and lock safety belt

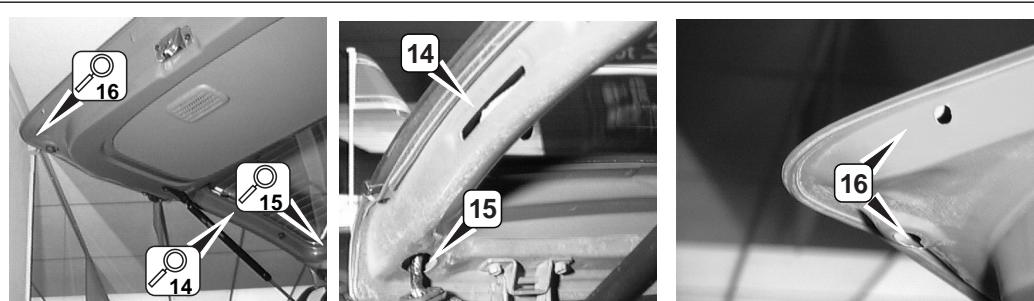

14. tailgate; left; right; remove upholstery
15. tailgate; front section; remove grommet

16. tailgate; rear section; through drain hole
17. 'C' posts; wheel arches; remove rubber sealing








UNDERSIDE

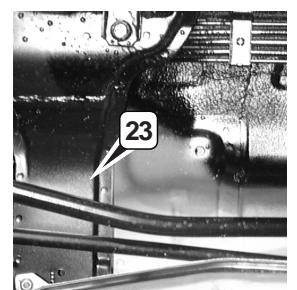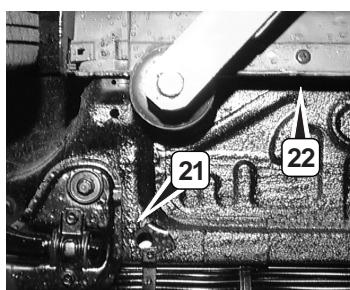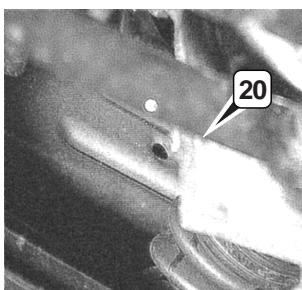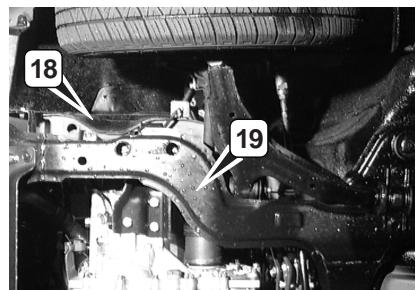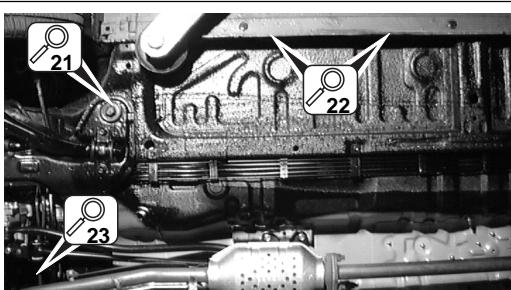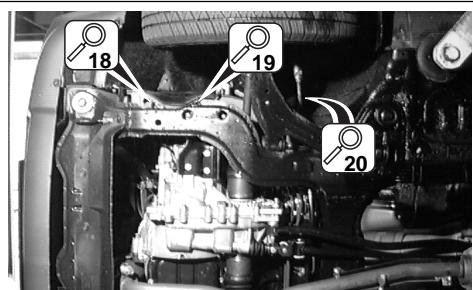

18. front longitudinal members; front section
19. subframe; front wheel suspension arms
20. front longitudinal members; rear section

21. floor panel; reinforcements
22. sills; front; remove rubber sealing

23. tunnel reinforcement
24. front wings

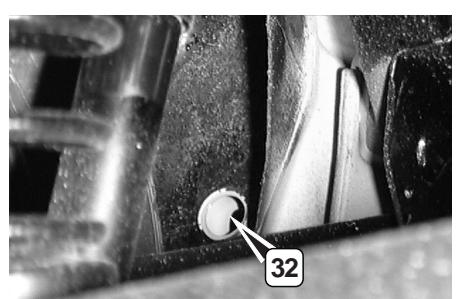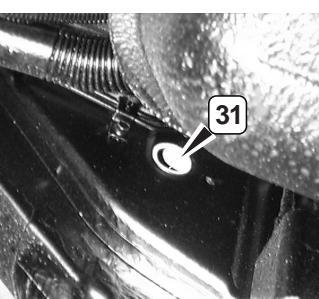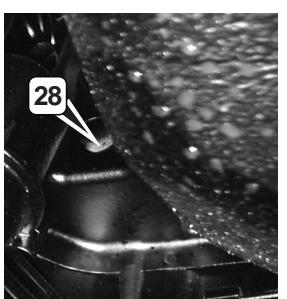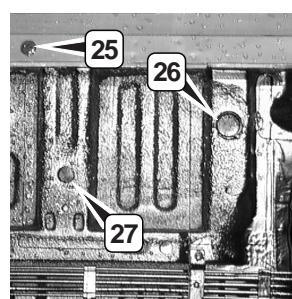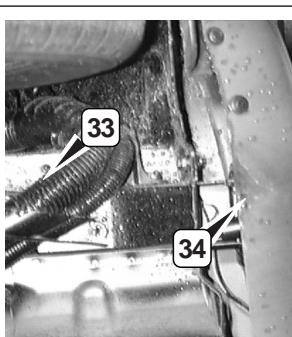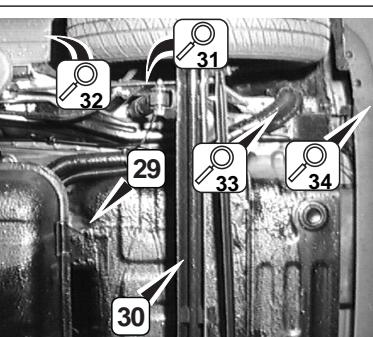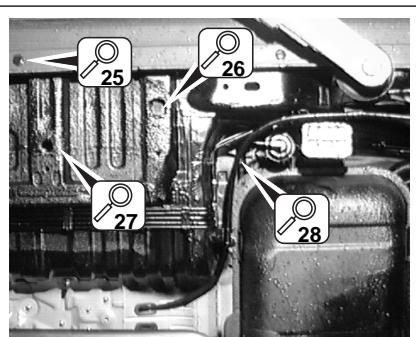

25. sills; rear; remove rubber sealing
26. transversal reinforcement
27. floor panel; reinforcements
28. crossmember front of fuel tank

29. rear fuel tank mountings
30. rear suspension
31. rear longitudinal members; front section
32. sills; rear section; remove rubber sealing

33. rear longitudinal members; rear section
34. bumper brackets
35. rear wings