





# MITSUBISHI GALANT 1997-

## VEHICLE ON THE FLOOR

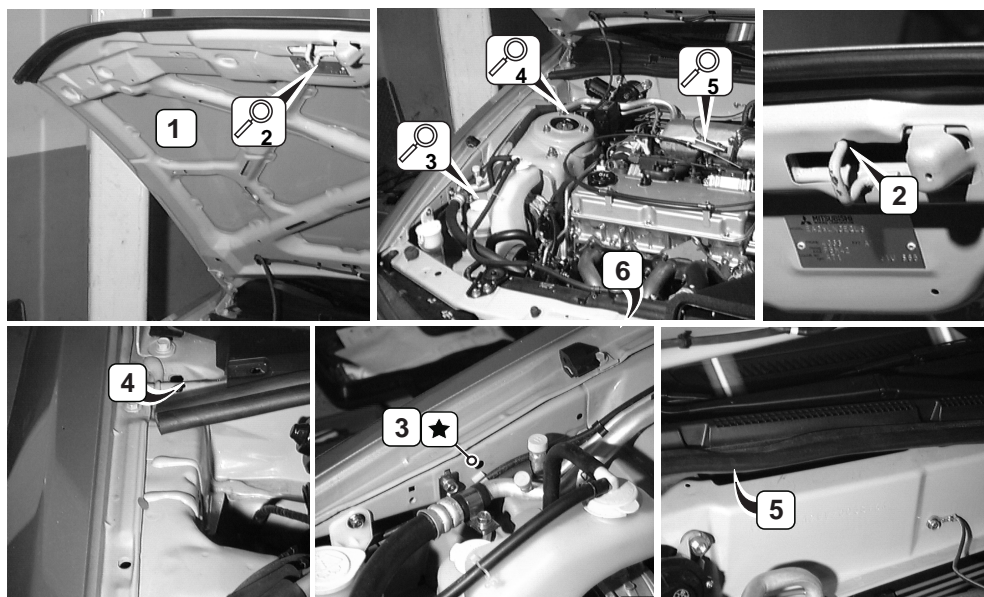

1. engine bonnet; remove upholstery
2. engine bonnet; front section
3. front wings; front section; drill hole
4. front wings; rear section
5. bulkhead; detach panel
6. crossmember, upper; radiator!

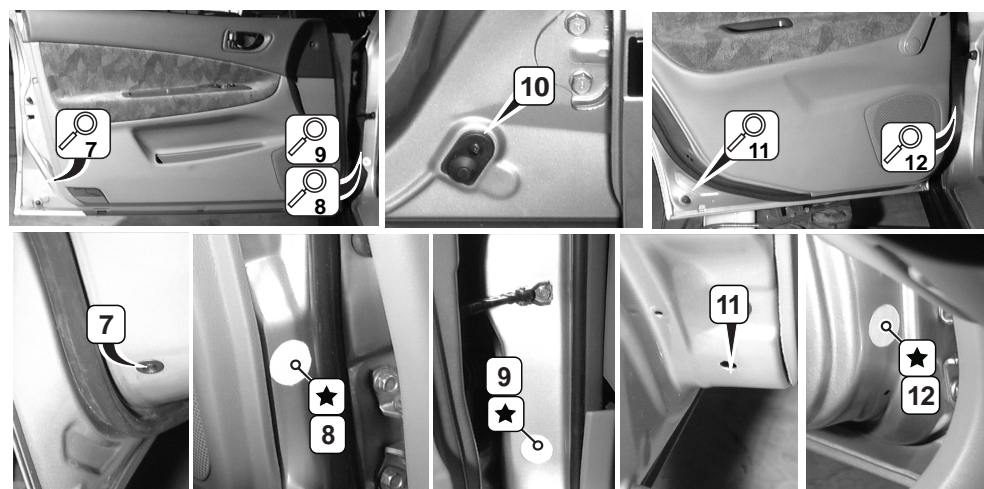

7. front doors; rear section; remove plug
8. front doors; front section; drill and plug hole
9. 'A' posts; drill and plug hole
10. 'B' posts; remove door switch; do not spray upwards!
11. rear doors; rear section; remove plug
12. rear doors; front section; drill and plug hole; loudspeaker!




13. tailgate; remove rubber sealing
14. transversal reinforcement at rear panel; remove sheet
15. tailgate; rear section; remove cover

16. tailgate; front section; remove cover
17. rear wings; remove cover
18. 'D' posts; remove cover

19. 'C' posts; remove door switch
20. rear wings; remove cover
21. 'D' posts; remove cover


## UNDERSIDE

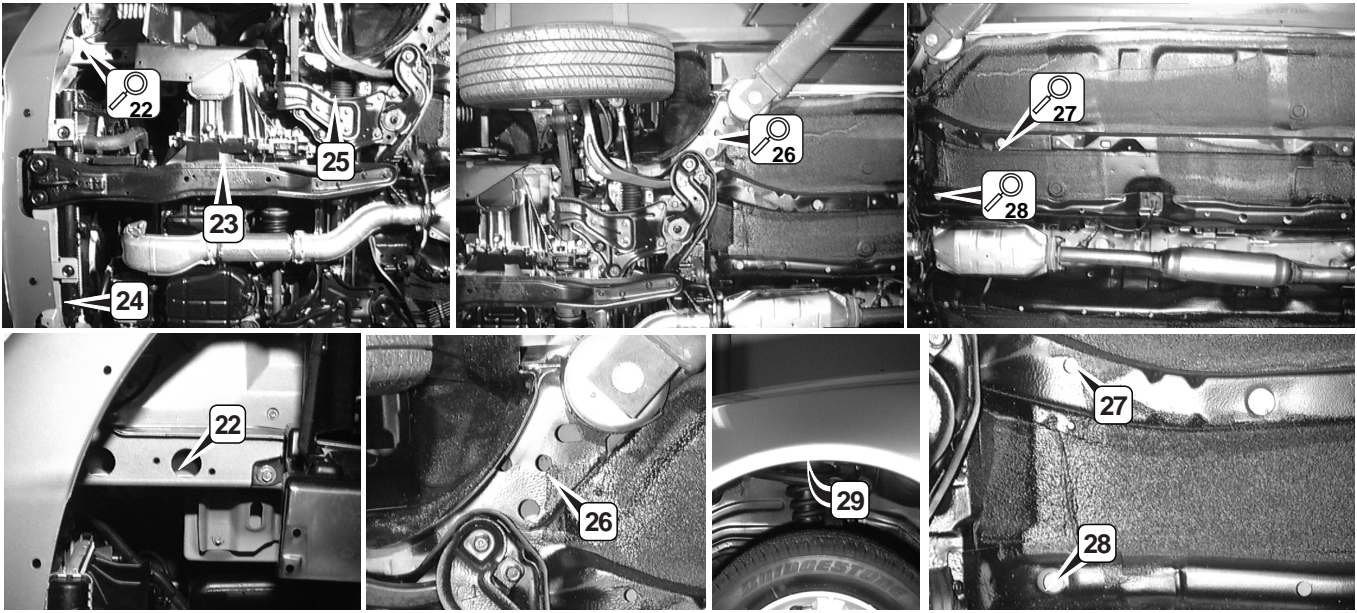

22. front longitudinal members; front section  
 23. subframe  
 24. crossmember front; bottom section

25. subframe  
 26. transversal reinforcement  
 27. front longitudinal members

28. tunnel reinforcement  
 29. shock absorber top mountings

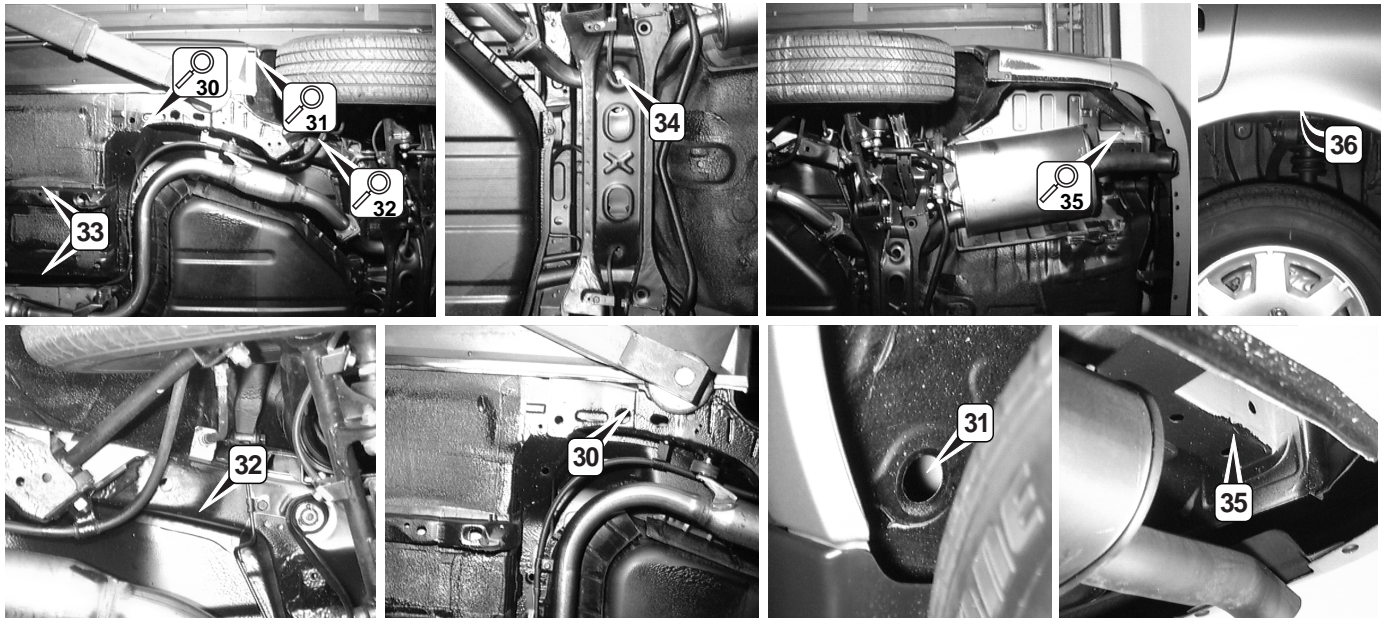

30. rear longitudinal members; front section  
 31. sills  
 32. longitudinal members; rear section

33. front longitudinal members; rear section  
 34. rear suspension crossmember

35. rear longitudinal members; rear section  
 36. shock absorber top mountings