
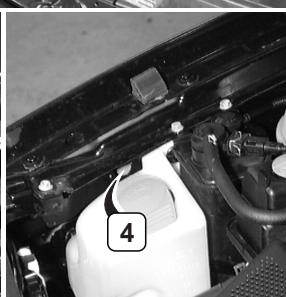
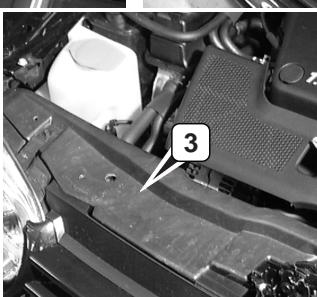
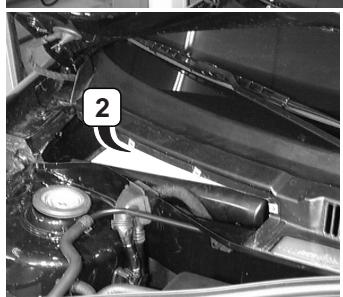
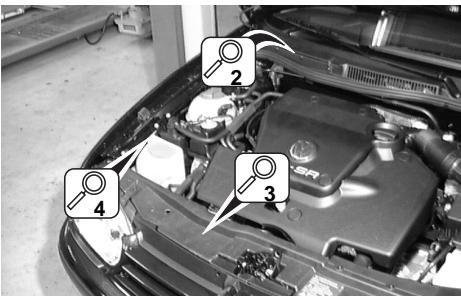




VOLKSWAGEN GOLF IV

1997-






VEHICLE ON THE FLOOR

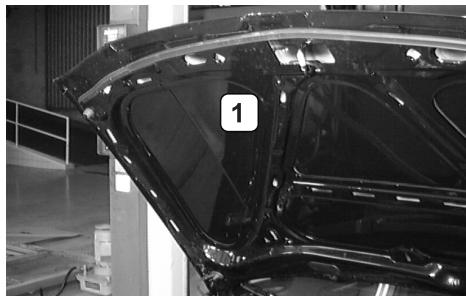



1. engine bonnet; remove upholstery, if fitted
2. bulkhead; detach panel; pollen filter!
3. crossmember, upper
4. longitudinal reinforcement in front wings

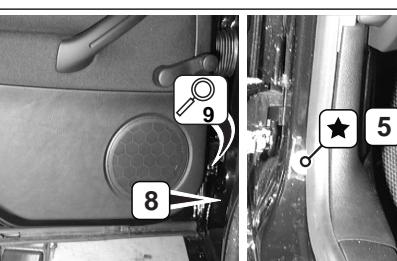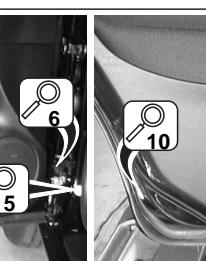


5. 'A' posts; drill and plug hole
6. front doors; front section; drill and plug hole; loudspeaker!
7. front doors; rear section; drill and plug hole
8. 'B' posts; underneath; pull out and lock safety belt
9. rear doors; front section; drill and plug hole; loudspeaker!
10. rear doors; rear section; drill and plug hole

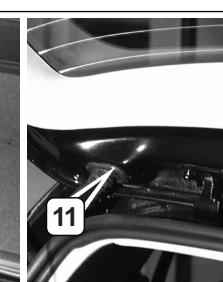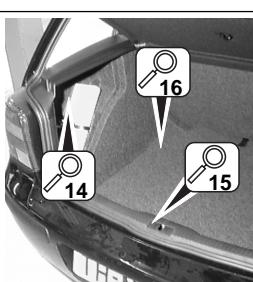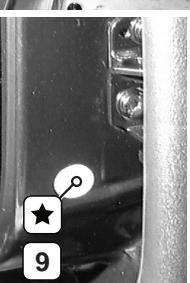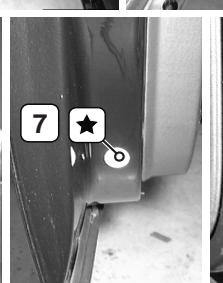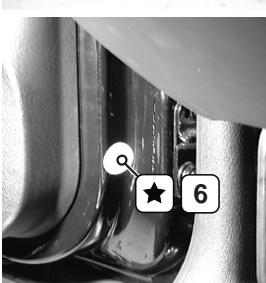

11. tailgate; front section; remove grommet
12. tailgate; rear section; drill and plug hole
13. tailgate; right; left; drill and plug hole
14. 'C' posts; pull upholstery away
15. crossmember, upper; detach panel
16. rear longitudinal members; remove rubber sealing

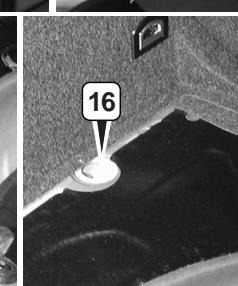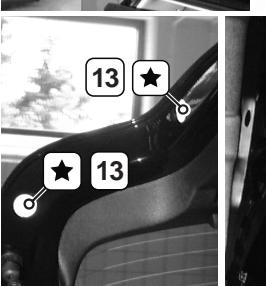

UNDERSIDE

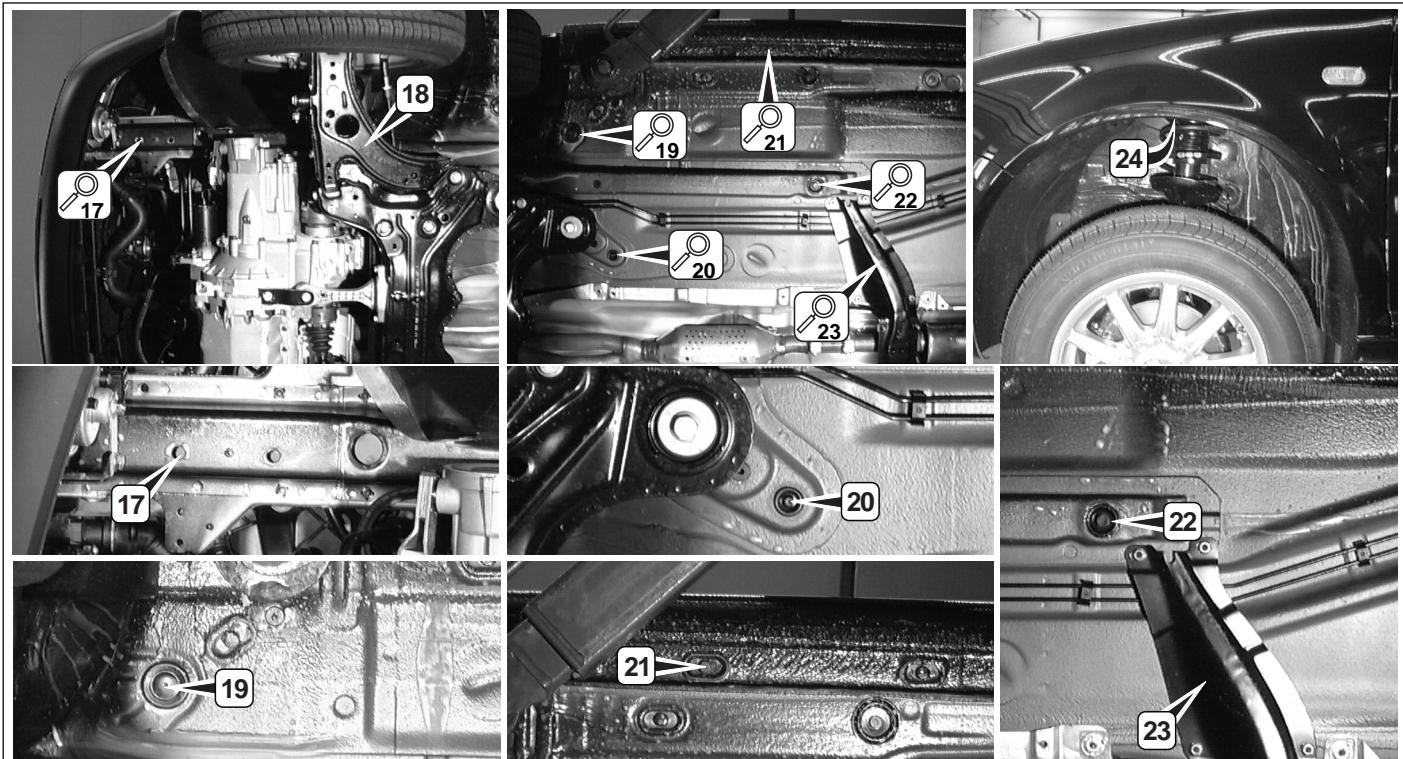

17. front longitudinal members

18. front wheel suspension arms

19. reinforcements at front end of floor panel; remove rubber sealing

20. suspension arm mountings; remove rubber sealing

21. sills; front section; remove rubber sealing

22. floor panel; longitudinal members; remove rubber sealing

23. tunnel reinforcement

24. front wings; remove plastic insert



25. 'B' posts; inner; remove rubber sealing

26. sills; rear section; remove rubber sealing

27. rear longitudinal members; front section; remove rubber sealing

28. rear longitudinal members; rear section; pull sheet away

29. 'C' posts; sills; rear; remove rubber sealing

30. rear wings; remove plastic insert