


Seat Altea 4D - HB

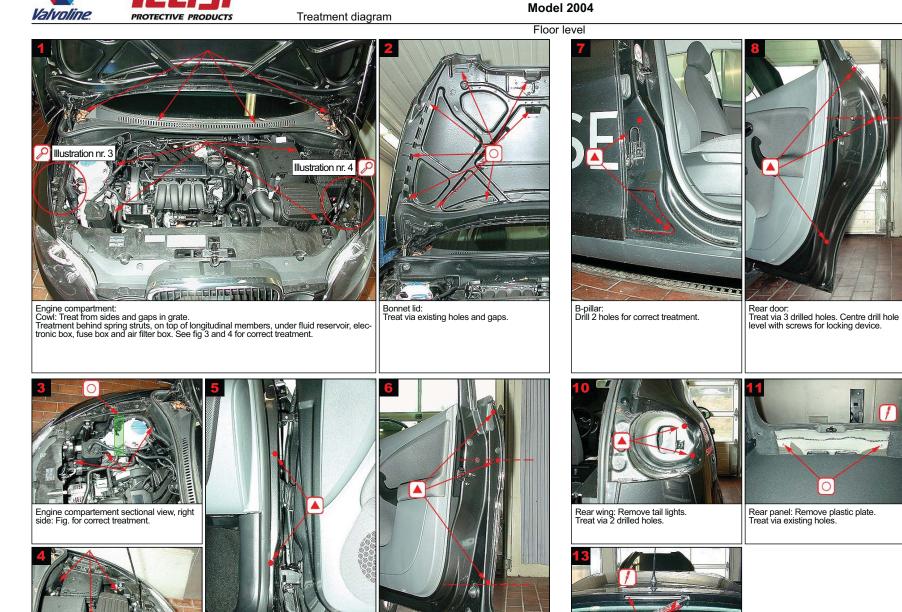





Engine compartement sectional view, left side: Fig. for correct treatment.

SEAT



Area

A-pillar: Drill 2 holes for correct treatment.

Front door: Treat via 3 drilled holes. Top drilling, drill close to door plate and right behind rubber plate. Centre drill hole level with screws for locking device.

Existing hole

Tailgate by roof: Remove stoplight

Zoom on detail Existing plugged hole

C-pillar: 3 drill holes for correct treatment.



Rear panel: Remove plastic plate. Treat via existing holes.



Drill 2 holes for correct treatment.





0.

