


# VOLKSWAGEN PASSAT 1997-

## VEHICLE ON THE FLOOR

		<ol style="list-style-type: none"> <li>1. engine bonnet; remove upholstery</li> <li>2. bulkhead</li> <li>3. longitudinal reinforcement in front wings</li> </ol>	
			<ol style="list-style-type: none"> <li>4. 'A' posts; drill and plug hole</li> <li>5. front doors; front section; drill and plug hole; loudspeaker!</li> <li>6. front doors; rear section; drill and plug hole</li> <li>7. 'B' posts; drill and plug hole; pull out and lock safety belt</li> <li>8. rear doors; front section; drill and plug hole; loudspeaker!</li> <li>9. rear doors; rear section; drill and plug hole</li> <li>10. 'C' posts; underneath</li> </ol>
			<ol style="list-style-type: none"> <li>11. tailgate; front section; remove grommet</li> <li>12. tailgate; rear section; drill and plug hole</li> <li>13. tailgate; left; right; drill and plug hole</li> <li>14. 'D' posts; open lid</li> <li>15. crossmember, upper</li> <li>16. rear longitudinal members; rear section; remove rubber sealing; sealed hole</li> </ol>


## UNDERSIDE

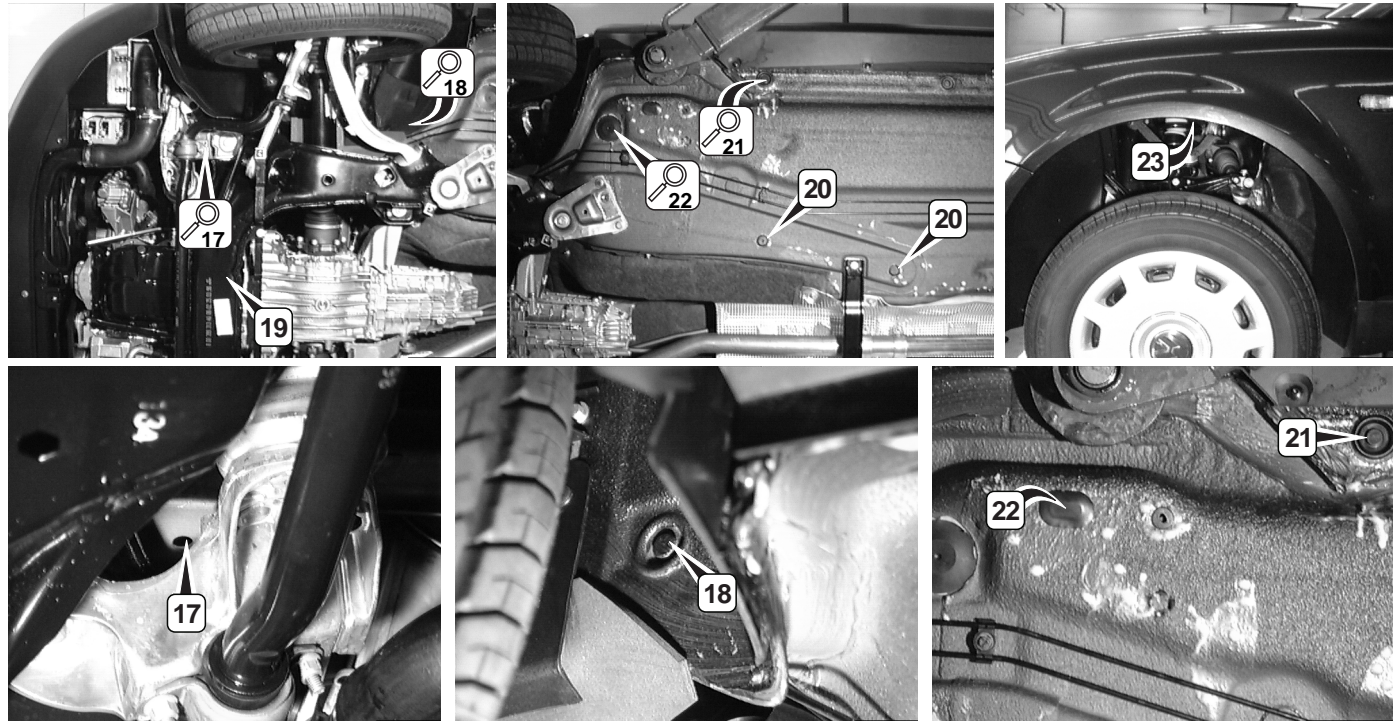

17. front longitudinal members; front section  
 18. front longitudinal members; rear section;  
 remove rubber sealing  
 19. subframe

20. floor panel; reinforcements; remove rubber  
 sealing  
 21. sills; front section; remove rubber sealing

22. reinforcements at front end of floor panel;  
 remove rubber sealing  
 23. front wings; remove plastic insert

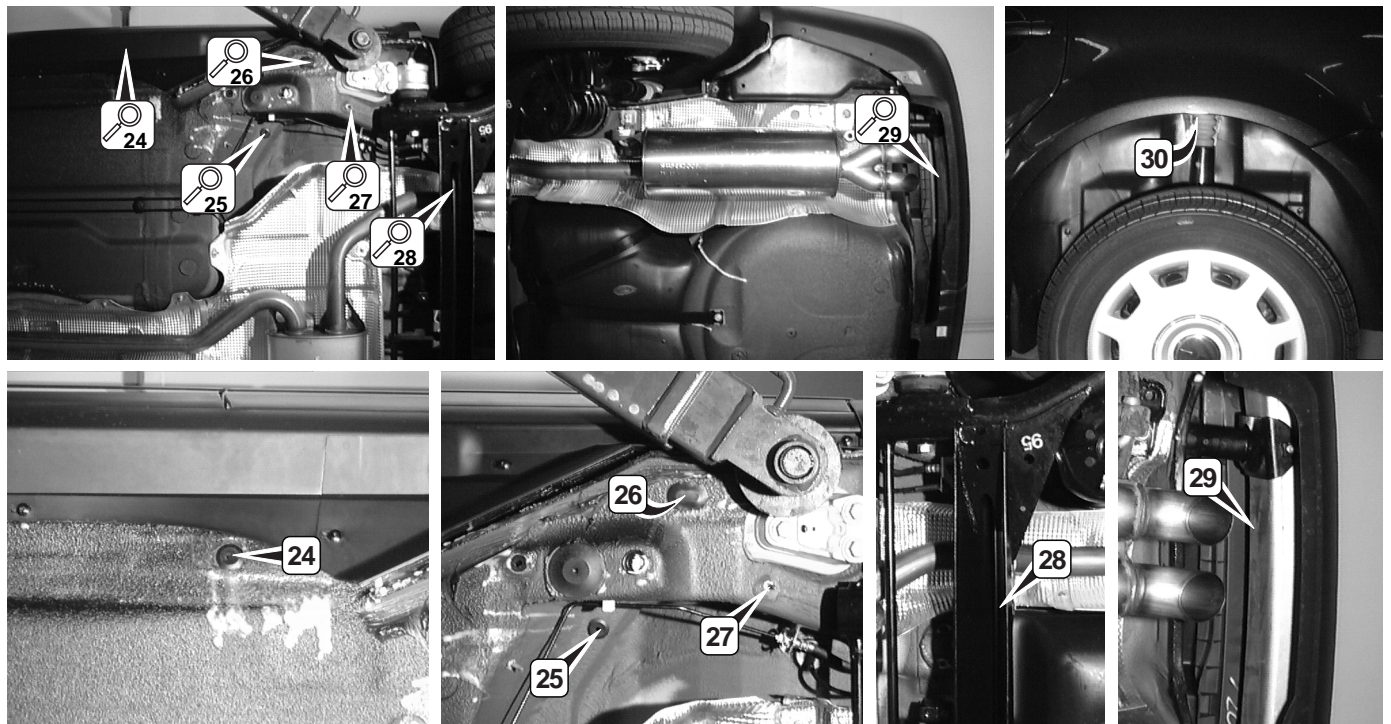

24. sills; rear section; remove rubber sealing  
 25. reinforcements under rear seat; remove  
 rubber sealing

26. 'C' posts; remove rubber sealing  
 27. rear longitudinal members; front section;  
 remove rubber sealing

28. rear suspension  
 29. crossmember, lower  
 30. rear wings; remove plastic insert